


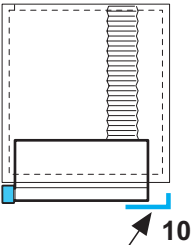


- (D) INSTALLATIONSANGABEN**  
Mindestabstand zur Kochfläche: 65 cm (Elektroplatten), 75 cm (Gas-, Öl- oder Kohlekochplatten)
- (GB) INSTALLATION SHEET**  
Minimum height above cooker: 43 cm (electric cookers), 65 cm (gas, gas oil or coal cookers)
- (F) FICHE D'INSTALLATION**  
Distance minimale par rapport à la cuisinière: 65 cm (cuisinière électrique), 75 cm (cuisinière à gaz, mazout ou charbon)
- (NL) INSTALLATIESCHEMA**  
Min. afstand van het kooktoestel: 65 cm (elektrische kooktoestellen) 75 cm (kooktoestellen op gas, olie of kolen)
- (E) FICHA DE INSTALACIÓN**  
Distancia mínima desde los quemadores: 65 cm (quemadores eléctricos), 75 cm (quemadores a gas, gasóleo o carbón)
- (P) FICHA DE INSTALAÇÃO**  
Distância mínima do fogão: 65 cm. (fogões eléctricos), 75 cm. (fogões a gás, óleo ou carbono)
- (I) SCHEDA INSTALLAZIONE**  
Distanza minima dai fuochi: 65 cm (fuochi elettrici), 75 cm (fuochi a gas, gasolio o carbone)
- (GR) ΚΑΡΤΕΛΑ ΕΓΚΑΤΑΣΤΑΣΗΣ**  
Ελάχιστη απόσταση από τις εστίες: 65 cm (ηλεκτρικές εστίες), 75 cm (εστίες αερίου, πετρελαίου ή με κάρβουνα)

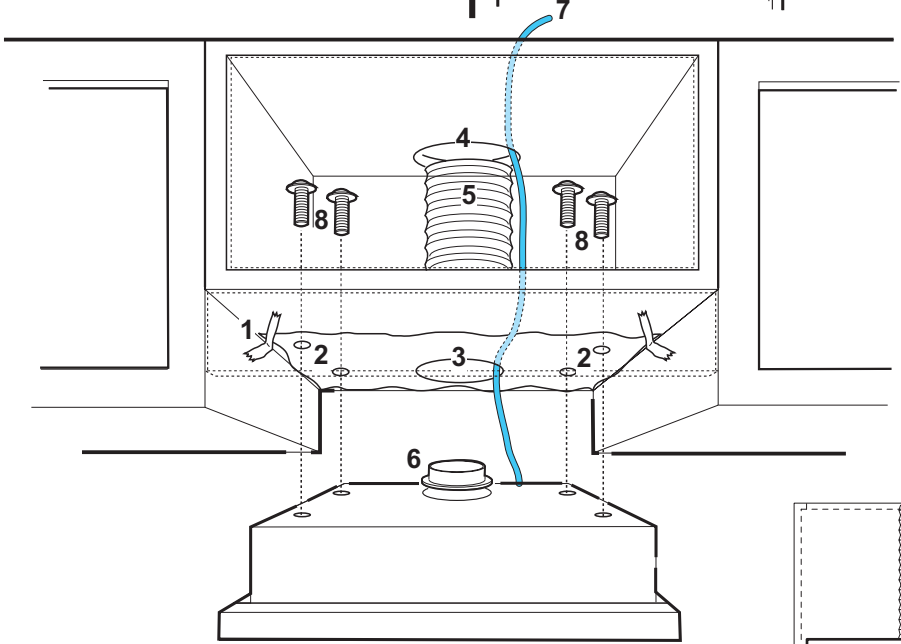

DNI 3260, DNO 3260,  
DNO 620 EV

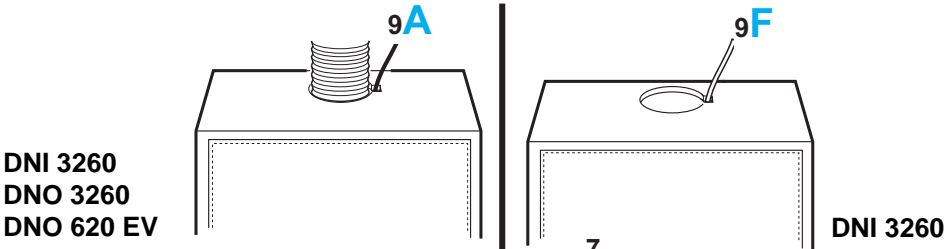

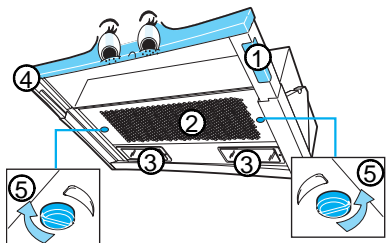

1. Control panel.
2. Grease filters (inside the extractor grille).
3. Lighting unit.
4. Pull-out steam deflector.
5. Fastener for opening and closing grille  
(The blue arrows show the direction of opening).

**Model DNO 3260 EV is not fitted with its own extraction unit (motor). It must therefore be connected to an external extraction unit. This has a solenoid valve which on opening (to open the valve, pull out the steam deflector) allows flow-through of the extracted air. Model DNO 3260 is the same apart from the solenoid valve.**

### RENEWING BULBS

1. Unplug the appliance or switch off the mains power supply.
2. Pull out the steam deflector.
3. Open the rear extractor grille.
4. Remove the burnt-out bulb and insert a new one.  
Use 40W max (E14) bulbs only.
5. Close the rear extractor grille.




### CLEANING THE GREASE FILTER:

1. Unplug the appliance or switch off the mains power supply.
2. Pull out the steam deflector.
3. Open the rear extractor grille.
4. Remove the grease filter fixing device.
5. Remove the dirty grease filter.
6. After cleaning the grease filter repeat the above steps in reverse, making sure the entire extraction surface is covered.

### CONTROL PANEL

**To switch on the hood, extract the steam deflector.  
To switch off the hood, close the steam deflector.**

- A. Light switch.  
B. Speed selector (only for model DNI 3260)
- 1 =small amount of steam and fumes  
2 =large amount of steam and fumes

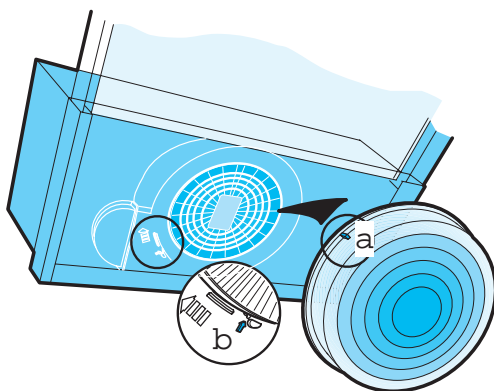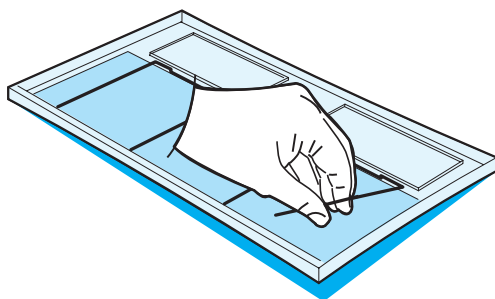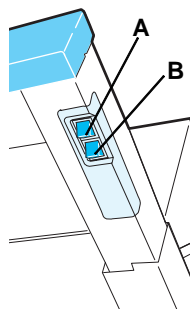

### ONLY FOR MODEL DNI 3260

### MOUNTING OR RENEWING THE CARBON FILTER:

1. Unplug the appliance or switch off the mains power supply.
2. Pull out the steam deflector.
3. Open the rear extractor grille.
4. If the carbon filter is already mounted and needs renewing, turn clockwise.
5. If the filter is not mounted: insert the carbon filter above the motor protection grille. Line up the reference mark on the edge of the carbon filter (a) with the arrow on the cowl (b). Then turn clockwise.
6. Close the rear extractor grille.

